

# RBR *fermata*

## UNDERWATER BATTERY CANISTER GUIDE



[rbr-global.com](http://rbr-global.com)

# Table of contents

1	Overview .....	3
2	Specifications .....	5
3	Opening and closing the RBR <i>fermata</i> .....	7
4	General maintenance .....	10
4.1	Installing the batteries.....	10
4.2	Replacing the O-rings.....	12
4.3	Connectors .....	14
4.4	Repairs.....	15
5	Revision history.....	16

# 1 Overview

RBR offers optional battery canisters which can extend deployment of any underwater instrument, including these options:

- 14V or 28V variants
- quick-release or low-profile handles
- 750m, 4000m, or 8000m depth rating

The *RBRfermata* automatically configures the internal arrangement of batteries regardless of cell voltage or chemistry, to provide the nominal output. It extends deployments by supplying up to 2.8kWh of energy to any underwater instrument. This is about forty times greater than our standard battery carriage capacity. A built-in resettable fuse ensures overcurrent protection, resetting automatically after a fault. The end-cap features three mounted MCBH connectors.



**RBRfermata | deep with quick-release handles**

A variant with low-profile handles is available for flexible integration with the Wirewalker (DMO).



**RBRfermata with low-profile handles**

The battery pack design accommodates 48 individual D-cells. An innovative battery carousel facilitates simple, tool-free battery replacement.




**RBRfermata with quick-release handles, battery carousel pulled out**

## 2 Specifications

### Physical specifications

	Model with quick-release handles	Model with low-profile handles
Power	48 D-cells	48 D-cells
Connectors	Three MCBH-6-FS	Three MCBH-6-FS
Housing	Plastic or Ti	Plastic or Ti
Length	663mm	686mm
Diameter	Ø140mm	Ø140mm
Handles	250mm x 142mm	Ø140mm
Weight (plastic)		
With lithium batteries	~14kg in air, ~3kg in water	~13kg in air, ~3kg in water
With Ni-MH batteries	~17kg in air, ~6kg in water	~16kg in air, ~6kg in water
With alkaline batteries	~16kg in air, ~5kg in water	~15kg in air, ~5kg in water
Weight (Ti)		
With lithium batteries	~27kg in air, ~16kg in water	~29kg in air, ~19kg in water
With Ni-MH batteries	~30kg in air, ~19kg in water	~32kg in air, ~22kg in water
With alkaline batteries	~29kg in air, ~18kg in water	~31kg in air, ~21kg in water
Depth rating	750m, 4000m, 8000m	750m, 4000m, 8000m
Operating temperature	-5°C to 35°C	-5°C to 35°C

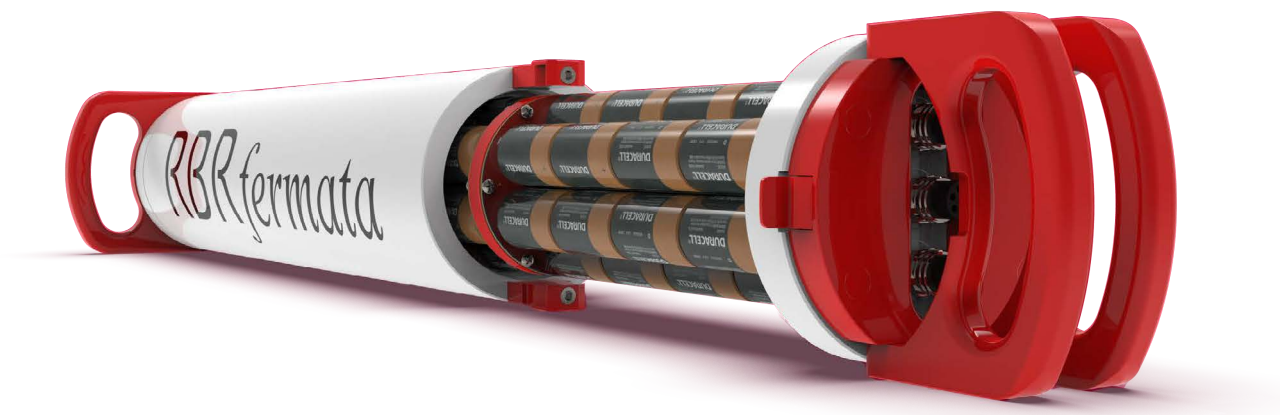


**Battery carousel pulled out**

## Electrical specifications

	14V variant			28V variant
Battery type	Lithium thionyl chloride (Li-SOCl <sub>2</sub> )	Nickel metal hydride (Ni-MH)	Alkaline (Zn-MnO <sub>2</sub> )	Lithium thionyl chloride (Li-SOCl <sub>2</sub> )
Nominal voltage	14.4V	14.4V	18.0V	28.8V
Maximum voltage	14.7V	17.4V	18.0V	29.2V
Maximum current	15A	15A	4A	15A
Capacity	2.8kWh	0.5kWh	0.9kWh	2.8kWh

## External MCBH-6-FS connector pinout

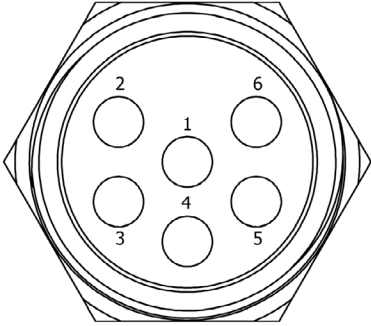	Pin No.	USB
	1	Ground
	2	Power
	3	N/C
	4	N/C
	5	N/C
	6	N/C



**Three MCBH-6-FS connectors**

**i** RBR offers an option to retrofit legacy RBR*fermata* battery canisters with the new battery carousel, quick-release handles, and new electronic hardware. To return your RBR*fermata* for retrofitting, please contact [RBR support team](#).

### 3 Opening and closing the RBRfermata


#### Opening the RBRfermata

1. If you are using the model with **quick-release** handles:


A. Locate two release tabs on the opposite sides of the battery end-cap.



B. Push at the tabs from the top to release the end-cap handles.

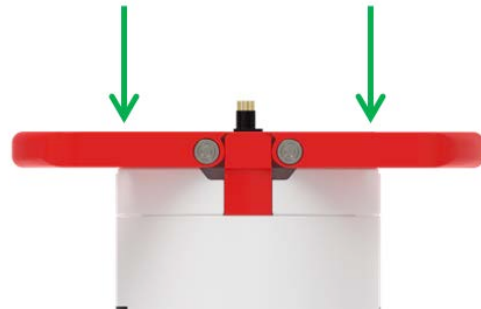

C. Move the handles up from both sides.

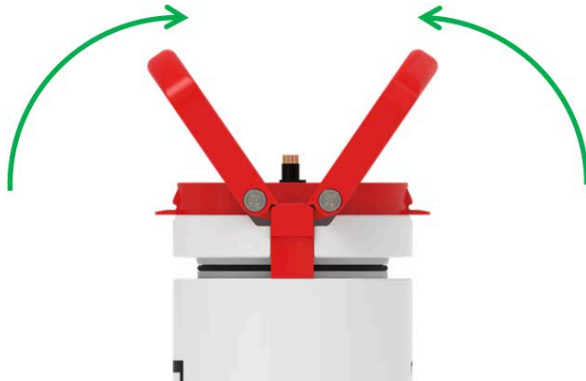

D. Firmly grip both battery end-cap handles and pull them up to remove the battery carousel.



2. If you are using the model with **low-profile** handles:

Firmly grip both battery end-cap handles and pull them up to remove the battery carousel.




### Closing the RBRfermata

1. If you are using the model with **quick-release** handles:


A. Align the battery end-cap with the slots on the housing and gently push down to ensure it fits in place.

**⚠** There is only one way to insert the battery end-cap. If it does not latch, rotate the battery carousel 180 degrees and try again.

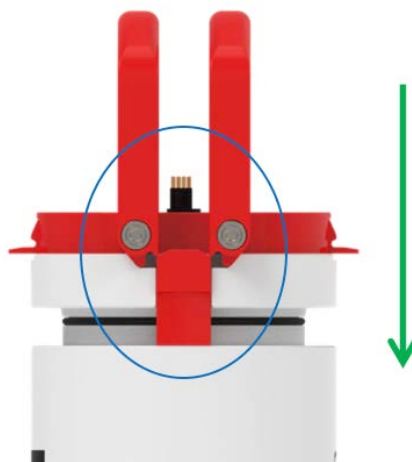



B. Place both hands on the top of the end-cap handles and gently push them out, towards the opposite sides, until they click.

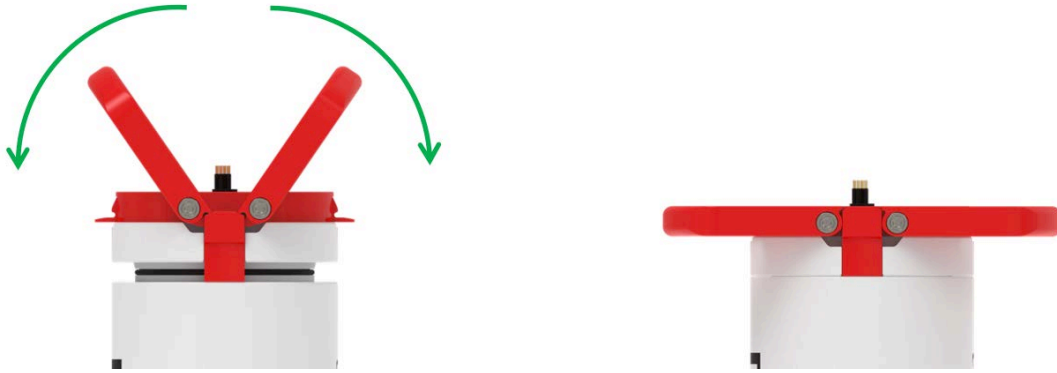

2. If you are using the model with **low-profile** handles:

Place the battery end-cap on the housing and gently push down to ensure it fits in place.



## 4 General maintenance

The RBR*fermata* underwater battery canisters are shipped with the O-rings replacement kit (O-rings, silicone compound, and O-ring removal tool) and lithium battery retention bands.

### 4.1 Installing the batteries

The RBR*fermata* battery canisters ship with no batteries, unless requested otherwise at the time of order.

⚠ Always remove the batteries from the RBR*fermata* during long-term storage!  
Doing so will prevent internal damage due to battery leakage and/or corrosion.

To install new batteries before deployment, [open your RBR\*fermata\*](#).

#### **Alkaline and nickel metal hydride batteries**


When using alkaline or nickel metal hydride batteries, simply put them in the carousel, ensuring correct polarity. These batteries are magnetic and hold in place with no additional steps required.



**RBR*fermata* with alkaline batteries installed**

## Lithium batteries

Lithium batteries do not have enough magnetic material to hold them together in assembly. Use the red retention bands provided with your *RBRfermata*, as shown.

 Verify polarity before installing the batteries.




**Lithium batteries retained in assembly**

After installing the batteries, [close your \*RBRfermata\*](#).

## 4.2 Replacing the O-rings

Care for the O-ring is the single most important item of maintenance. A water leak can damage the *RBRfermata* beyond repair. The battery canister seal depends upon its O-ring, and proper O-ring maintenance is crucial.

**i** The O-ring may lose elasticity over time, even when the *RBRfermata* is not deployed. RBR strongly recommends replacing the O-ring regularly.

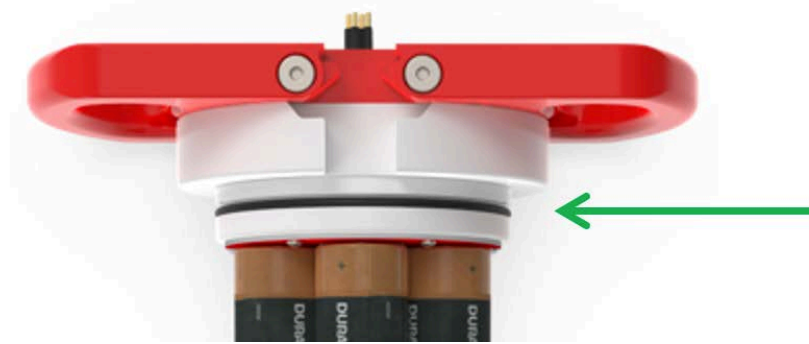

**Location of the O-ring**

To access the O-ring, [open your RBRfermata](#).

### Inspecting the O-ring

Visually inspect the new O-ring for nicks and scratches before installing it. Pay attention to the following areas:

- The surface of the O-ring itself
- The mating surface on the inside of the case between the threads and the open end
- The groove in the end-cap where the O-ring sits

**⚠** Avoid using any object that could scratch the O-ring or any of its mating surfaces. If dirt is present in the O-ring groove, remove the O-ring as described below and thoroughly clean the groove. Do not return this old O-ring to the battery canister! If you remove the O-ring from the *RBRfermata* for any reason, always replace it with a new one. If the surfaces of the O-ring groove are scratched, pitted, or damaged, contact [RBR](#) for advice.

## Replacing the O-ring

⚠ Do not use metal screwdrivers or any other metal tool! They may scratch the O-ring groove and render the end-cap useless.

1. Use the plastic O-ring tool (included with the *RBRfermata*) to remove the O-ring from its groove. The O-ring may need to stretch quite a bit as it is pushed off. This requires some effort, but can be done by hand.
2. Clean the groove thoroughly with a soft, lint-free cloth and compressed air, if necessary.
3. Select the proper O-ring and inspect it for damage.
4. Lubricate the new O-ring with a very light film of silicone compound (included with the instrument).
5. Install the new O-ring by pushing it into place and popping it into its groove.
6. Once the new O-ring is in place, inspect it once more for scratches and debris, and wipe away any silicone compound deposited on the end-cap.
7. Once the inspection is complete, [close your \*RBRfermata\*](#).

### O-rings on | deep variants


The | deep variants of the battery canisters use two O-rings. One is the main O-ring, and the other is the backup. Both are required to protect the *RBRfermata* from flooding.

### Orienting the O-rings on | deep variants

Correct placement and orientation of the two O-rings are critical to maintaining depth rating integrity.

The main O-ring has a round profile. It must be installed first.

The backup O-ring is flat on one side, and concave on the other. When installed, the concave side must face the main O-ring.

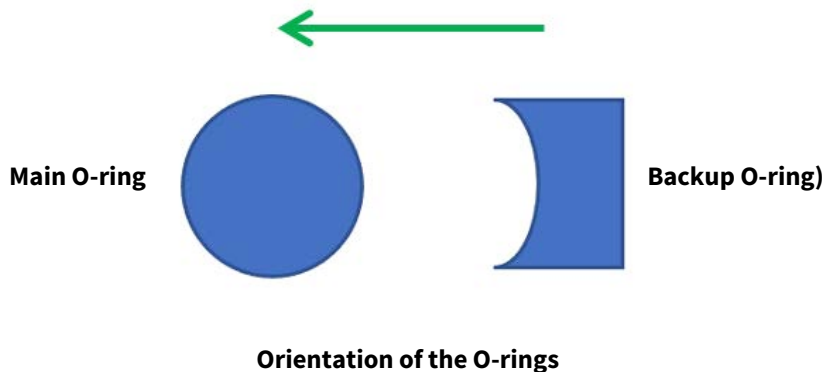

## 4.3 Connectors


### Cable bend radius

The smallest bend radius for RBR supplied cables is 15cm.

### Lubricating the connectors

Lubrication improves watertight sealing, prevents corrosion, and reduces the force required to de-mate the connector. Use the silicone compound provided with your instrument.

- Apply the silicone compound to all female connectors before every mating
- Ensure each connector hole is filled with approximately 30% lubricant

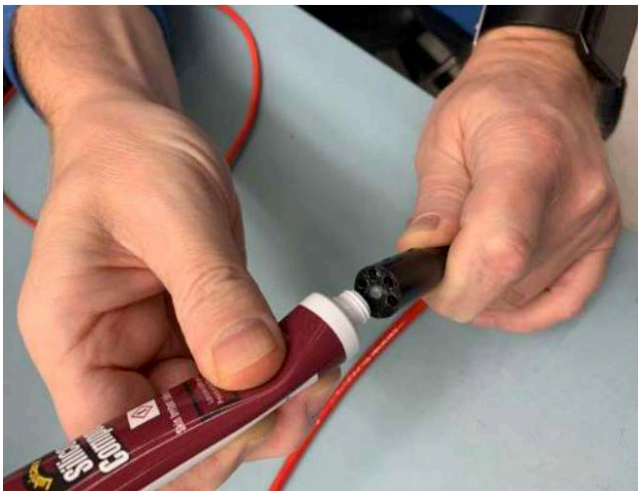


**Lubricating a connector**

### Reducing mechanical stress

- Do not pull on the cable
- Hold onto the connector to pull out the cable
- Disconnect by pulling straight out, not at an angle
- Avoid sharp bends at the point where the cable enters the connector
- Avoid angular loads on the connector

## 4.4 Repairs

RBR supports all our products. Contact us immediately at [support@rbr-global.com](mailto:support@rbr-global.com) or via the [RBR website](#) if there are any issues with your battery canister. Please have the model and the serial number of the unit ready. Our support team will work to resolve the issue remotely. In some cases, you may have to return your *RBRfermata* to RBR for further servicing.

 There are no user-repairable parts of the battery canister. Any attempt to repair without prior authorisation from RBR will void the warranty. Refer to the [RBR warranty statement](#).

To return a product to RBR for an upgrade, repair, or calibration, please contact our [support team](#) to obtain a return merchandise authorisation code (RMA) and review the detailed shipping information on the [RBR website](#).

## 5 Revision history

Revision No.	Release date	Notes
A	28-March-2022	Original
B	28-February-2023	Added information on the variant with low-profile handles. Corrected the image of MCBH-6-FS connector.
C	31-May-2023	Updated the Overview and Specifications sections.
D	31-July-2023	Added a warning to the Installing the batteries section.
E	16-July-2024	Updated the maximum depth rating to 8000m in the Overview and Specifications sections. Updated the image of batteries retained in assembly in the Installing the batteries section.

